



## **BEFORE VACCINATION**

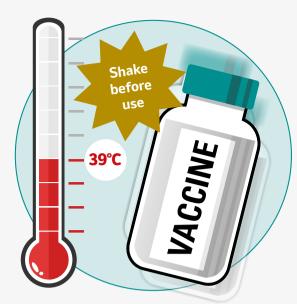

Warm the vaccine and possibly the solvent liquid (minimum 5 minutes) in lukewarm water.



2 Rinse the IDAL through at least 10 times. Change the bottles regularly. These can be ordered free of charge from your vet practice.

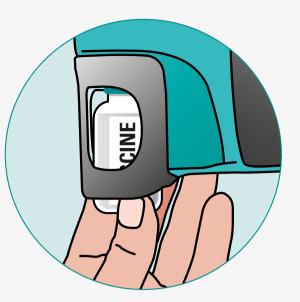


**6** Place the vaccine in the IDAL. When doing so hold the IDAL upside down.

## **DURING VACCINATION**



A Reset the daily counter on the IDAL. The IDAL is now ready for use.

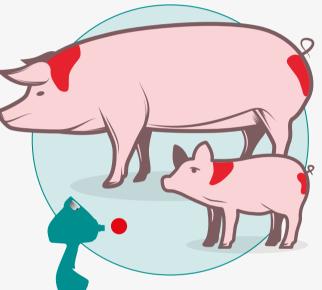

**6** Give the vaccine at the correct location.



**10** Administer the right amount of vaccine correctly into the skin. Ensure that there is sufficient contact time with the skin.

## AFTER VACCINATION



Rinse the IDAL again at least 10 times after use. Leave the bottle of rinsing fluid on the device



**13** Clean the exterior of the IDAL. Only the head and the spike can go under the tap.

Pay attention: The housing of the IDAL is only splash-proof.



Remove the battery from the IDAL and store the IDAL clean in the case.



The IDAL is now ready again for the next use.

CHARGING THE BATTERY: 1.5 HOURS MAXIMUM





